 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


A	B	C	D
1	S171-125-01	1075x346	1/3
2	S171-126-01	1075x346	1/3
3	S171-204	791x350	1/3
4	S171-202	791x350	1/3
5	S171-517	300x140	2/3
6	S171-518	300x140	2/3
7	S171-558	701x140	2/3
8	S171-902	716x299	1/3
9	S171-903	1089x385	1/3
10	LH-1074	1074x14	1/3
11	S171-411	758x55	1/3
12	S171-010	754x212	3/3



СТРІЧКА БЕЗПЕКИ
ПРЕДОУПРЕЖДЕТЕЛЬНАЯ ПЕЛЕНА / ГАБАРИТ ЗАПЕЧЕЧЕННЯ
THE ANTI-TOPPLE DEVICE / DAS SICHERUNGSBAND

Сторону безпеки встановити на задній частині корпусу меблів. Це запобіжить перекиданню меблів у разі падіння людини на них. Не встановлювати на поверхні, які можуть бути пошкоджені. Не використовувати на поверхнях, які не можуть витримувати навантаження. Не використовувати на поверхнях, які не можуть витримувати навантаження. Не використовувати на поверхнях, які не можуть витримувати навантаження.

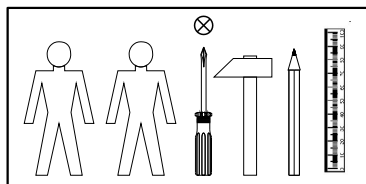